

## Light Pod Template

©CJH 2007 ([www.ngkitcar.co.uk](http://www.ngkitcar.co.uk))

The template on the following page can be used to mark the rear wing. When cut out, the rear light pods can be inserted from behind.


In order for the size to be true it must be printed without scaling. In Acrobat Reader select **Print**, then in the Print dialog box under **Page Scaling** select **None**.

After printing, check the height and width of the actual template (given on the printout) to make sure the size is correct.


The centre line of the template should be placed on the centre of the rear wing (I used 110mm from the inner wing edge). The lowest point on the template should be about 80—100mm above the bottom edge of the wing (I used 95mm).

Print this image scaled  
to 280mm high  
by 200mm wide

Widest section  
87mm approx

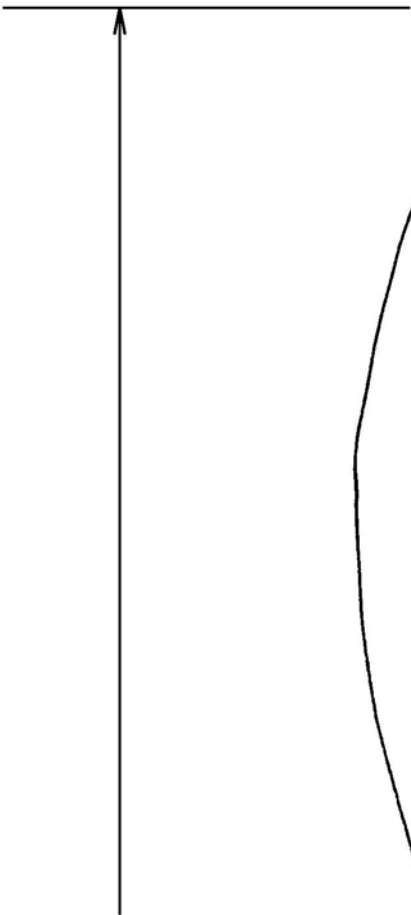

270mm

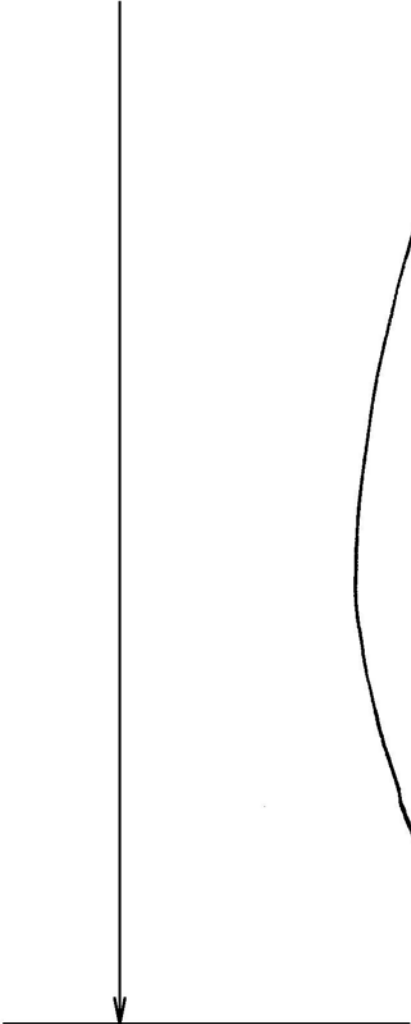

**TOP**

**BOTTOM**